



ABODE HOTELS CANBERRA PTY LTD
ABN: 81 041 402 610

1300 122 633
PO Box 4519, Kingston ACT 2604

ABODE BELCONNEN
(02) 6220 0355
3 Grazier Lane, Belconnen ACT 2617
abodehotels.com.au

WASHING MACHINE DRYER COMBO

Please see the following operational guidelines to ensure optimal usage of the washing machine dryer combo:

Date: __AUGUST 2023__



Choose your setting: To tailor the washing cycle to your preferences, use the available options. On the right-hand side of the control dial, you will find buttons corresponding to temperature, spin level, dry level and delay settings. These buttons allow for precise adjustments based on your specific requirements.

Start the cycle: Once you have chosen the desired program by adjusting the settings, press the "Start" button to initiate the machine's operation. The selected program will start.

End of cycle: Once complete the machine will read END.

You can now safely open the machine's door to retrieve your laundered items. As a precaution, please wait for a brief interval as the door mechanism releases gradually. Please do not force the door open, as certain washing or drying conditions might delay opening.

Once finished please turn the program dial to the 'OFF' position to turn the machine off.

Important notes

- Please only use the laundry liquids provided by the hotel during the washing cycle. This ensures optimal performance and prevents any undesired outcomes. Washing liquid is available at reception 24/07.
- Please Do Not exert force to open the door. Variations in temperature and water utilization might occasionally lead to a slight delay in door release.
- Please do not hesitate to seek our help if you require further assistance.
- For machines manufactured by Electrolux, please note that only one drying option is available.