

ABODE HOTELS CANBERRA PTY LTD
ABN: 81 041 402 610

TUGGERANONG
150 Anketell Street
TUGGERANONG ACT 2900

PO Box 4519 KINGSTON ACT 2604
P 1300 1 ABODE (22633)
W abodehotels.com.au



COOKTOP

Please see the following operational guidelines to ensure optimal usage of the cooktop.

Date: __AUGUST 2023__

Turn on: Begin by activating the hub switch located on the wall next to the power outlet.

Then press and hold the power button until the device activates.

Heat Adjustment: Please use the (+/-) controls to adjust the heat intensity. The numerical value displayed on the cooktop corresponds to the respective.

Timer Configuration: If necessary, access the timer function by selecting the clock symbol. This enables you to set the desired cooking duration.

End of Cooking: Once completed, deactivate the cooktop by pressing and holding the power button until the indicator light extinguishes.

Shutdown Sequence: Please refrain from turning off the hub switch until the "H" symbol, which blinks during the shutdown process, completely ceases its activity.

Important Notes.

- Please always activate the rangehood each time you use the cooktop. Slide the hood forward and adjust the fan force accordingly.
- Please do not hesitate to seek our help if you require further assistance.