

ABODE HOTELS CANBERRA PTY LTD
ABN: 81 041 402 610

TUGGERANONG
150 Anketell Street
TUGGERANONG ACT 2900

PO Box 4519 KINGSTON ACT 2604
P 1300 1 ABODE (22633)
W abodehotels.com.au



MICROWAVE

Please see the following operational guidelines to ensure optimal usage of the microwave.

Date: __AUGUST 2023__



Prior to use, ensure that the turntable shaft, turntable ring assembly, and glass tray are accurately and securely assembled within the microwave.

Food Placement: Place the food intended for cooking at the central area of the microwave, and subsequently close the microwave door.

Power Level Selection: Roll the Time/weight round button towards the right and you will be able to set the time required. As it rolls, the time will be shown in the digital area. Once you set the time, you can press the start button towards the bottom right.

Manual Time Adjustment: Alternatively, turn the time/weight dial to set up the desired cooking time. The microwave allows for a maximum cooking time of 95 minutes.

Operation Steps: If you press the start button continuously thrice, it will become child lock and there will be a reset button on the button left and once we press it, it will come back to normal.

Upon the completion of cooking time, the microwave will emit an audible signal, and the LED display will revert to presenting the current time.