



ABODE HOTELS CANBERRA PTY LTD  
ABN: 81 041 402 610

ABODE WODEN  
(02) 6108 4950  
10 Bowes Street WODEN ACT 2606

PO Box 4519 KINGSTON ACT 2604  
P 1300 1 ABODE (22633)  
W abodehotels.com.au


## AIR CONDITIONER

Please see the following operational guidelines to ensure optimal usage of the air conditioner:

Date:           NOVEMBER 2023          

### 5 Using the Remote Controller

#### (1) How to Start, Stop, Change the Mode, and Adjust the Temperature

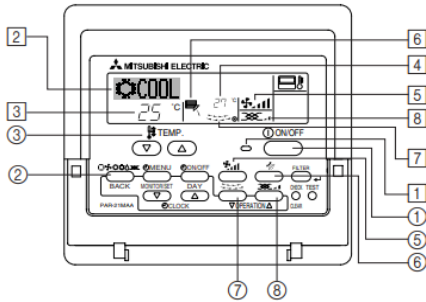

##### <To Start Operation>

- Press the ON/OFF button ①.
  - The ON lamp ① and the display area come on.

##### Note:

- When the unit is restarted, initial settings are as follows.

		Remote Controller settings	
Mode		Last operation mode	
Temperature setting		Last set temperature	
Fan speed		Last set fan speed	
Airflow up/down	Mode	COOL or DRY	Horiz. outlet
		HEAT	Last setting
		FAN	Horiz. outlet

##### <To Stop Operation>

- Press the ON/OFF button ① again.
  - The ON lamp ① and the display area go dark.

##### <Selecting the Mode>

- With the unit running, press the Mode button ② as many times as necessary.
  - Each press switches operation to the next mode, in the sequence shown below. The currently selected mode is shown at ②.

→ COOL → DRY → FAN → AUTO → HEAT → Ventilate  
\*1 \*1,\*3,\*4 \*1 \*1,\*2

##### Note:

- \*1 Availability of this mode depends on the type of unit connected.
- \*2 Appears only on Mr. Slim units with installed ventilation functionality.
- \*3 Does not appear if Auto Mode has been disabled at the Function Selection of remote controller. For information about how to set this function, refer to section 6, item [4]-2 (2).
- \*4 HEAT and COOL do not appear during AUTO mode if Auto mode display has been disabled at the Function Selection of remote controller. For information about how to set this function, refer to section 6, item [4]-4 (3).

##### <To Change the Room Temperature Setting...>

- To lower the temperature: Press the Set Temperature button ③.
- To raise the temperature: Press the Set Temperature button ③.
  - Each press changes the setting by 1 °C. The current setting is displayed at ③.
  - The available ranges are as follows. \*1, \*2

COOL or DRY mode	HEAT mode	AUTO mode	FAN
19 - 30 °C (67 - 87 °F) *3	17 - 28 °C (63 - 83 °F) *3	19 - 28 °C (67 - 83 °F) *3	Cannot be set.

##### Note:

- \*1 Available ranges vary according to the type of unit connected (Mr. Slim, CITY MULTI, etc.).
- \*2 If temperature range limits have been set at Function Selection of remote controller, the available ranges will be narrower than shown above. If you attempt to set a value outside of the restricted range, the display will show a message indicating that the range is currently restricted. For information about how to set and clear these range limits, refer to section 6, item [4]-2 (3).
- \*3 If Function Selection of remote controller are set to display the temperature in Fahrenheit. For information about how to select °C or °F, refer to section 6, item [4]-4 (1).



ABODE HOTELS CANBERRA PTY LTD  
ABN: 81 041 402 610

ABODE WODEN  
(02) 6108 4950  
10 Bowes Street WODEN ACT 2606

PO Box 4519 KINGSTON ACT 2604  
P 1300 1 ABODE (22633)  
W abodehotels.com.au

## (2) Fan Speed, Airflow Direction, and Ventilation

### <To Change the Fan Speed...>

- Press the Fan Speed button (5) as many times as necessary while the system is running.
  - Each press changes the force. The currently selected speed is shown at (5).
  - The change sequence, and the available settings, are as follows.

FAN SPEED	Display
4-speed model	Auto → Speed 1 → Speed 2 → Speed 3 → Speed 4
3-speed model	Auto → Speed 1 → Speed 2 → Speed 3
2-speed model	Auto → Speed 1 → Speed 2

 
#### Note:

- The number of available fan speeds depends on the type of unit connected. Note also that some units do not provide an "Auto" setting.
- In the following cases, the actual fan speed generated by the unit will differ from the speed shown on the remote controller display.
  - While the display is showing "STAND BY" or "DEFROST".
  - Immediately after starting HEAT mode (while the system is waiting for the mode change to take effect).
  - In HEAT mode, when room temperature is higher than the temperature setting.
  - When the unit is in DRY mode.

### <Using Ventilation>


#### On Mr. Slim models

- To run the ventilator together with the indoor unit:
  - Press the ON/OFF button (1).
    - The Vent indication appears on the screen (at (8)). The ventilator will now automatically operate whenever the indoor unit is running.
- To run the ventilator independently:
  - Press the Mode button (2) until (Vent icon) appears on the display. This will cause the ventilator to start.
- To change the ventilator force:
  - Press the Ventilation button (3) as necessary.
    - Each press toggles the setting, as shown below.



### <To Change the Airflow's Up/Down Direction>

- With the unit running, press the Airflow Up/Down button (6) as necessary.
  - Each press changes the direction. The current direction is shown at (6).
  - The change sequence, and the available settings, are as follows.

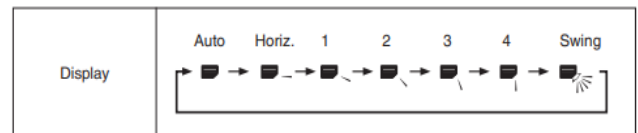


- Note that during swing operation, the directional indication on the screen does not change in sync with the directional vanes on the unit.
- Some models do not support directional settings.

#### Note:

 - Available directions depend on the type of unit connected. Note also that some units do not provide an "Auto" setting.
- In the following cases, the actual air direction will differ from the direction indicated on the remote controller display.
  - While the display is showing "STAND BY" or "DEFROST".
  - Immediately after starting heater mode (while the system is waiting for the mode change to take effect).
  - In heat mode, when room temperature is higher than the temperature setting.

### <To Change the Right/Left Air Direction>

- Press the louver button (7) as necessary.
  - The louver image (7) appears. Each press of the button switches the setting as follows.



#### On CITY MULTI models

- To run the ventilator together with the indoor unit:
  - Press the ON/OFF button (1).
    - The Vent indication appears on the screen (at (8)). The ventilator will now automatically operate whenever the indoor unit is running.
- To run the ventilator only when the indoor unit is off:
  - Press the Ventilation button (3) while the indoor unit is off.
    - The On lamp (at (1)) and the Vent indication (at (8)) come on.
- To change the ventilator force:
  - Press the Ventilation button (3) as necessary.
    - Each press toggles the setting, as shown below.



#### Note:

- With some model configurations, the fan on the indoor unit may come on even when you set the ventilator to run independently.