



ABODE HOTELS CANBERRA PTY LTD
ABN: 81 041 402 610

ABODE WODEN
(02) 6108 4950
10 Bowes Street WODEN ACT 2606

PO Box 4519 KINGSTON ACT 2604
P 1300 1 ABODE (22633)
W abodehotels.com.au

COOKTOP

Please see the following operational guidelines to ensure optimal usage of the cooktop:

Date: _____ **AUGUST 2023** _____

Turn on: Begin by activating the hub switch located on the wall next to the power outlet.

Then press and hold the power button until the device activates (some cooktops don't have power button).

Heat Adjustment: Please turn the controls to adjust the heat intensity. The numerical value displayed on the cooktop corresponds to the respective low to high clockwise.

End of Cooking: Once completed, deactivate the cooktop by pressing and holding the power button until the indicator light extinguishes.

Shutdown Sequence: Please refrain from turning off the hub switch until the "H" symbol, which blinks during the shutdown process, completely ceases its activity.

Important Notes;

- Please always activate the rangehood each time you use the cooktop. Slide the hood forward and adjust the fan force accordingly.
- Please do not hesitate to seek our help if you require further assistance.