



ABODE HOTELS CANBERRA PTY LTD
ABN: 81 041 402 610

ABODE WODEN
(02) 6108 4950
10 Bowes Street WODEN ACT 2606

PO Box 4519 KINGSTON ACT 2604
P 1300 1 ABODE (22633)
W abodehotels.com.au

WESTINGHOUSE WASHING MACHINE DRYER COMBO

Please see the following operational guidelines to ensure optimal usage of the washing machine dryer combo:

Date: November 2023

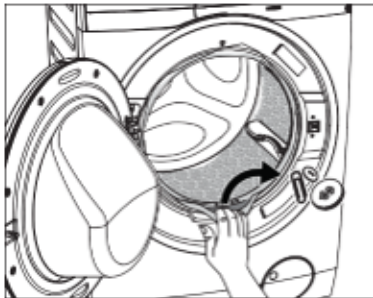
5. DAILY USE - WASHING (Only)

5.1 Loading The Laundry

1. Turn the water tap on.
2. Connect the main plug to the main socket.
3. Press the On/Off button to turn on the Washer-Dryer. Turn the knob to set a program. The Washer-Dryer will propose a temperature and automatically select the spin value provided for the program you have chosen.


The selector knob can be turned either clockwise or counter-clockwise.

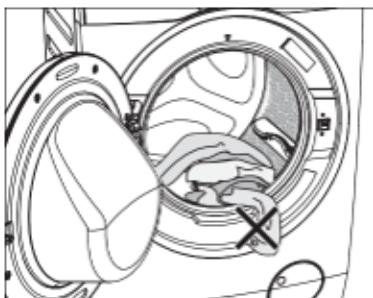
4. Check and remove objects (if there are any) that could be trapped in the fold.




5. Place the laundry in the drum, one item at a time, shaking them out as much as possible. (Refer to page 24 "WASHING HINTS")

6. Close the door.

 Make sure that no laundry remains between the seal and the door.

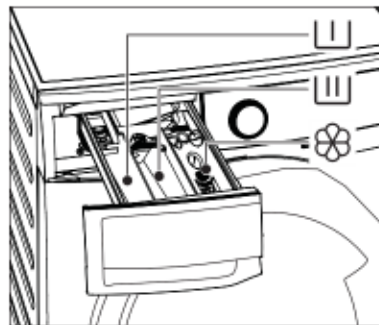



5.2 Using Detergent And Additives


 Please read "Detergents Type and Quantity of Detergent" on page 25 before use.

1. Detergent Dispenser Drawer

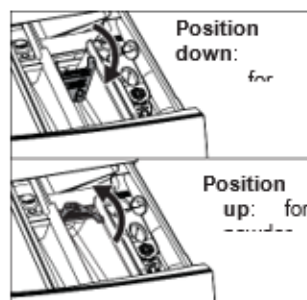
The detergent dispenser is divided into three compartments.




-  Compartment "PREWASH"
This compartment is only used for detergent when a "Prewash" option is selected.

-  Compartment "MAIN WASH"
This compartment is used for detergent on all programs.

 Detergent flap



-  Compartment "SOFTENER"
This compartment is used for fabric conditioner and starching agent.



ABODE HOTELS CANBERRA PTY LTD
ABN: 81 041 402 610


ABODE WODEN
(02) 6108 4950
10 Bowes Street WODEN ACT 2606

PO Box 4519 KINGSTON ACT 2604
P 1300 1 ABODE (22633)
W abodehotels.com.au


i When you use the liquid detergent

- Do not use gelatinous or thick liquid detergents.
- Do not put more liquid than the maximum level.
- Do not set the "Prewash" phase.
- Do not set the "Delay Start".


2. Measure out the detergent and the fabric softener:

- Pull out the dispenser drawer until it stops.
- Measure out the amount of detergent required, pour it into the main wash compartment .



- If you wish to carry out the "Prewash" phase, pour it into the compartment marked .



- If required, pour fabric softener into the compartment marked .



- Close the drawer gently.

i NOTE

The softener amount used must not exceed the "MAX" mark in the drawer.

If you use thick softeners it is recommended to dilute with water.

i NOTE

Residues of detergent, softener and water may remain in the dispenser. It is recommended to clean the dispenser regularly to remove any residue.

5.3 Options Setting

1. If you want your laundry to be spun or use temperature different from the one proposed by the Washer-Dryer, press "Spin" and "Temp" touchpads repeatedly to change the spin speed and temperature.

Press the option touchpads, if you want your laundry to be washed with special functions.

i NOTE

- Different functions can be combined which is dependent on the program selected.
 - If an option is not compatible with the wash program selected, the symbol " - - - " will flash on display along with buzzer sound.
2. If you want to delay the start of the washing program, press the "Delay Start" touchpad repeatedly to choose your Washer-Dryer delay time.



ABODE HOTELS CANBERRA PTY LTD
ABN: 81 041 402 610

ABODE WODDEN
(02) 6108 4950
10 Bowes Street WODEN ACT 2606

PO Box 4519 KINGSTON ACT 2604
P 1300 1 ABODE (22633)
W abodehotels.com.au

5.4 Starting A Cycle (▶||)

To start a program, press the Start/Pause touchpad. The corresponding pilot light will stop flashing and a default program duration will be displayed on the screen.

After approx. 15 minutes from the start of a program:

- The appliance will automatically adjust the selected program duration according to the type and size of the load.
- The display will show adjusted program duration.

NOTE

If you press any touchpad while a program is operating, the symbol " --- " will flash on display along with buzzer sound. (except Start/Pause touchpad and On/Off button)

5.5 Interruption Of A Program

- To pause, press Start/ Pause. The indicator will start flashing.
- Press the Start/Pause again. The program will continue.

5.6 Changing A Program

Changing a running program is possible only by switching off the appliance.

- Press the "On/Off" button to cancel the program and to turn off the appliance.
- Press the "On/Off" button again to start the appliance.

Now you can set a new wash program and change any available options. Press Start/Pause to start the new program.

NOTE

 
The appliance will not drain the water (except programs; Vapour Refresh, Spin, Rinse + Spin, Tub Clean).

 
5.7 Changing The Options

It may be possible to change some of the options after a program has started.

1. Press the touchpad Start/Pause. The indicator will start flashing.
2. If available change the options that you wish.
3. Press Start/Pause again. The program will continue.

5.8 Opening The Door

 
While a program or the Delay Start is operating, the appliance door is locked and the display shows the indicator "  ". First, set the machine to PAUSE by pressing the "Start/Pause" touchpad. Wait until the door lock indicator goes off, then the door can be opened.

If the door lock indicator "  " does not disappear, this means that the machine is already heating and the water level is above the bottom edge of the door or the drum is turning. In this case the door CAN NOT be opened. If you need to open it, you must drain the water to open the door.



In case of emergency please refer to "Emergency door opening" on page 37.

5.9 At The End Of The Program

- The appliance stops automatically.
- The acoustic signal will operate.
- The display will show " End ".
- The indicator of the touchpad Start/Pause goes off.
- The door lock indicator "  " goes off.
- Remove the laundry from the appliance. Make sure that the drum is empty.
- Keep the door partly open, to prevent the mildew and odours.
- Turn off the water tap.



ABODE HOTELS CANBERRA PTY LTD
ABN: 81 041 402 610

ABODE WODDEN
(02) 6108 4950
10 Bowes Street WODEN ACT 2606

PO Box 4519 KINGSTON ACT 2604
P 1300 1 ABODE (22633)
W abodehotels.com.au


NOTE

At the end of the program, the time remaining can suddenly decrease from 7 minutes or less to 0 due to the overestimated total program time during the load sensing phase. In some cases (with perfectly balanced load) the program time can be shorter than the time estimated after the load sensing phase is completed. This is a normal behavior of the machine and not a cause for concern as it does not compromise its performance.

5.10 When The Washing Program Is Completed, But



There Is Water In The Drum

(Option "Rinse Hold  " is used)

- The drum turns regularly to prevent the creases in the laundry.
- The indicator "Start/Pause" flashes to remind you to drain the water.
- The door lock indicator "  " is on. The door stays locked.

 **You must drain the water to open the door.**

To drain the water:

1. Press the "Start/Pause  " touchpad.
The appliance drains the water and spins with the maximum spin speed for selected program.
Alternatively, before pressing the "Start/Pause" touchpad, you can press the "Spin" touchpad to change the spin speed. You can select "No Spin (---)", if you want the machine to only drain the water.
2. When the program is completed and the door lock indicator "  " goes off, you can open the door.
3. Press the "On/Off" button to deactivate the appliance.

NOTE

After approximately 18 hours, if you do not press Start/Pause touchpad, the appliance will drain and spin automatically (except for "Wool" program).

5.11 AUTO Off Mode

The AUTO Off mode automatically deactivates the appliance to decrease the energy consumption when:

- You do not press any buttons for 5 minutes before you press "Start/Pause".
 - Press the "On/Off" button to activate the appliance again.
- After 5 minutes from the end of the washing program.
 - Press the "On/Off" button to reactivate the appliance. Display will show the end of the last wash.
 - Press any touchpad again to show the last wash program.




ABODE HOTELS CANBERRA PTY LTD
ABN: 81 041 402 610

 
 
ABODE WODDEN
(02) 6108 4950
10 Bowes Street WODDEN ACT 2606

PO Box 4519 KINGSTON ACT 2604
P 1300 1 ABODE (22633)
W abodehotels.com.au

 

6. DAILY USE - DRYING (Only)


1. Press the **On/Off** button to turn on the machine.


 The water tap must be **open** and the drain hose must be positioned in the sink or connected to the drain pipe.


2. Make sure the load size does not exceed the maximum drying capacity of the machine.
3. Turn the knob to set a wash program which can select drying option (refer to Program Chart on page 11), according to your clothes then press **Mode** touchpad to switch your machine to **Dry Only Mode**.
4. If you wish to select an automatic drying, press the "Dryness Level" option until the icon corresponding to the required dryness level appears on the display. (see page 15)
5. If you wish to select a timed drying, press the "Time Dry"  option repeatedly until desired drying time reached. (see page 14)
6. Press "Start/Pause"  touchpad to start the program. The time remaining is updated every minute.

7. At the end of the **program** :

- The acoustic signal will operate.
- The display will show "**E**" and "Anti Crease ()" icon is lit.
- The door lock indicator  still on.
- The appliance will perform the anti-crease phase for approximately 10 minutes.


After **anti-crease** phase finish, the door lock indicator  goes off. The display will show " **E** nd".

 If you wish to open the door during the anti-crease phase or interrupt it, press Start/Pause touchpad.

8. Press "On/Off" button to switch the machine off.
9.  At the end of each drying cycle, the temperature of your clothing will be high. For your safety, please leave the door open to let your clothes cool before removing your laundry.

7. DAILY USE - WASHING & DRYING (Non-Stop Program)

7.1 Washing Program + "Dryness Level" Option

1. Load the laundry and add detergent and fabric softener. Make sure the load size does not exceed the maximum drying capacity of the machine.
2. Turn the knob to set a wash program which can select drying option (refer to Program Chart on page 11), according to your clothes then press **Mode** touchpad to switch your machine to **Wash + Dry Mode**.
3. Select the required options by pressing the relevant touchpads. If possible, do not select a spin speed lower than that proposed by the machine to avoid unnecessary longer drying time therefore saving energy.
4. Set the dryness level by pressing "**Dryness Level**" touchpad. The display will then show the whole duration of **wash** & dry cycle.
 If a program is not compatible with the drying option selected, the symbol " --- " will flash on display.
5. Start the program by pressing Start/Pause touchpad. The time remaining is updated every minute on the display.



ABODE HOTELS CANBERRA PTY LTD
ABN: 81 041 402 610

ABODE WODEN
(02) 6108 4950
10 Bowes Street WODEN ACT 2606

PO Box 4519 KINGSTON ACT 2604
P 1300 1 ABODE (22633)
W abodehotels.com.au

6. At the end of the program press the **On/Off** button to switch the machine off.



At the end of each drying cycle, the temperature of your clothing will be high. For your safety, please leave the door open to let your clothes cool before removing your laundry.

i NOTE

- If you wish to open the door during the anti-crease phase or interrupt it, press Start/Pause touchpad.
- Some drying level options are not available for some programs.
- When "Iron Dry ☀️" option is selected, the display time will be adjusted after approximately 15 minutes from the start of the program, based on the laundry type and load size. The display will show the new adjusted time.
- When "Extra Dry ☀️" or "Cupboard Dry ☀️" is selected the display time will be adjusted towards the end of the drying cycle when machine senses required dryness level has been achieved. In case of laundry quantity lower than maximum load capacity, the time remaining can suddenly decrease from e.g. approximately 50 minutes to 10.

7.2 Washing Program + "Time Dry 🕒" Option

1. Load the laundry and add detergent and fabric softener. Make sure the load size does not exceed the maximum drying capacity of the machine.
2. Turn the knob to set a wash program which can select drying option (refer to Program Chart on page 11), according to your clothes then press **Mode** touchpad to switch your machine to **Wash + Dry Mode**.
3. Select the required options by

pressing the relevant touchpads. If possible, do not select a spin speed lower than that proposed by the machine to avoid unnecessary longer drying time therefore saving energy.

4. Set the drying time by pressing "Time Dry 🕒" touchpad repeatedly until desired drying time reached. The display will then show the whole duration of wash & dry cycle.



If a program is not compatible with the drying option selected, the symbol " --- " will flash on display.

5. Start the program by pressing Start/Pause touchpad. The time remaining is updated every minute on the display.

6. At the end of the program press the **On/Off** button to switch the machine off.



At the end of each drying cycle, the temperature of your clothing will be high. For your safety, please leave the door open to let your clothes cool before removing your laundry.

i NOTE

- If you wish to open the door during the anti-crease phase or interrupt it, press Start/Pause touchpad.
- If you set only 10 minutes of drying, the appliance performs only a Cooling phase.

Important notes

- Please only use the laundry liquids provided by the hotel during the washing cycle. This ensures optimal performance and prevents any undesired outcomes. Washing liquid is available at reception 24/07.
- Please Do Not exert force to open the door. Variations in temperature and water utilization might occasionally lead to a slight delay in door release.
- Please do not hesitate to seek our help if you require further assistance.