



## AIR CONDITIONER

Please see the following operational guidelines to ensure optimal usage of the air conditioner:

**Date:** \_\_\_December 2023\_\_\_\_\_

**Panel location:** A remote control is conveniently positioned on the wall adjacent to the entrance door of your room.

**Turn on:** Take the remote out from the wall and press the (⏻) button to initiate the air conditioning system.

**Customisable Settings:** Select mode (Heat, Fan, Cool, Dry, or Auto) to suit your requirements. To do so, use the Up (^) or Down (v) Arrow icons to navigate through the modes. Once the desired mode is displayed, make further adjustments on fan force, temperature by using the Right (>) or Left (<) arrow icons.

### Important Notes:

- Please kindly be informed that it may take up to 15-30 minutes for the heating/cooling element to achieve its optimal temperature. During this interval, the remote screen will display the "standby" message.
- Please do not hesitate to seek our help if you require further assistance.