



## COOKTOP

Please see the following operational guidelines to ensure optimal usage of the Cooktop:

**Date:** \_\_\_December 2023\_\_\_\_\_

**Turn on:** Begin by activating the hub switch located on the wall next to the power outlet.

Then press and hold the power button until the device activates.

**Heat Adjustment:** Please use the (+/-) controls to adjust the heat intensity. The numerical value displayed on the cooktop corresponds to the respective.

**Timer Configuration:** If necessary, access the timer function by selecting the clock symbol. This enables you to set the desired cooking duration.

**End of Cooking:** Once completed, deactivate the cooktop by pressing and holding the power button until the indicator light extinguishes.

**Shutdown Sequence:** Please refrain from turning off the hub switch until the "H" symbol, which blinks during the shutdown process, completely ceases its activity.

### Important Notes.

- Please always activate the rangehood each time you use the cooktop. Slide the hood forward and adjust the fan force accordingly.
- Please do not hesitate to seek our help if you require further assistance.