 


WASHING MACHINE DRYER COMBO

Please see the following operational guidelines to ensure optimal usage of the washing machine dryer combo:

Date: June 2024



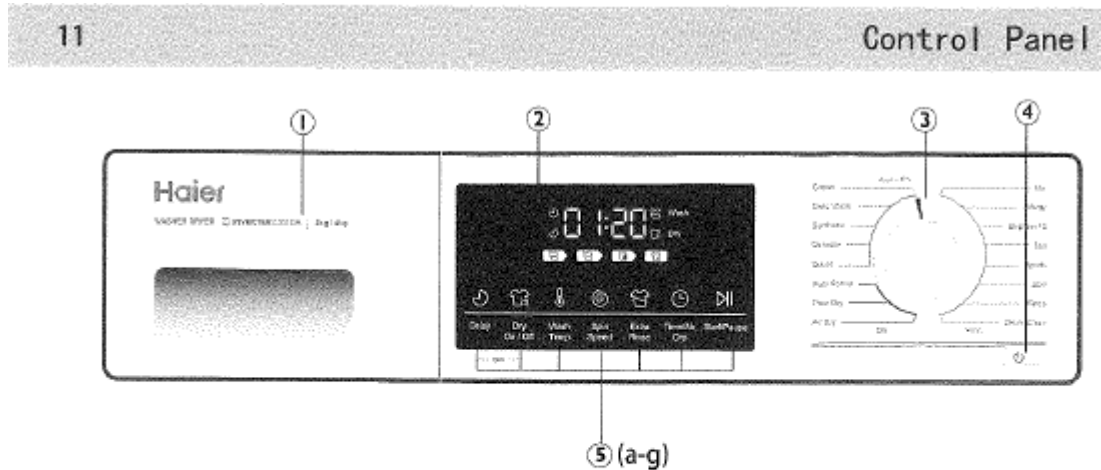


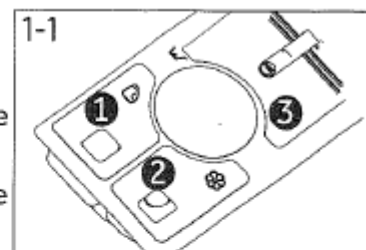 
1. Detergent/Softener drawer
2. Display
3. programme selector
4. Power button
5. Function buttons (a-g)

- a. Delay
- b. Dry On/Off
- c. Wash Temp
- d. Spin Speed
- e. Extra Rinse
- f. Time/Air Dry
- g. Start/Pause

1.1 Detergent drawer

Open the drawer, three compartments can be seen:

- ① Compartment : Liquid detergent for programme
- ② Compartment : Softener, Conditioning agent etc.
- ③ Compartment : Powder detergent for programme



1.2 Programme selector

By turning the knob, one of 16 programmes can be selected, its default settings will be displayed.

1.3 Power button

Touch this button gently to switch on, the display is shining. Touch it again for about 2 seconds to switch off. If no panel element or programme is activated after a while, the machine will shut down automatically.

Control panel-function buttons

12



1.4 Function buttons

The function buttons (Fig. 1-2) enable additional options in the selected programme before programme start. The related indicators are displayed.

By switching off the appliance, all options are disabled.

 
If a button has multiple options, the desired option can be selected by touching the button sequentially.

To delete the setting or to cancel the setting process, press the function button, the LED switches off.

Not all functions are available for all programmes.

Note: Factory settings

To get best results in each programme Haier has well defined specific default settings. If there is no special requirement default settings are recommended.

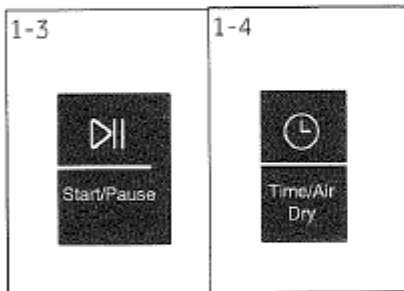


1.4.1 "Start/Pause" button

Touch this button (Fig. 1-3) gently to start or interrupt the currently displayed programme. During operation, the displayed washing time is blinking. During a pause also the time display is blinking.

1.4.2 Function "Time/Air Dry"

Touch this button (Fig. 1-4) in order to activate /de-activate the "Time/Air Dry" function.

 By touching button sequentially, drying time can be seen. In combination with programme "Time/Air Dry", this function sets the drying time.

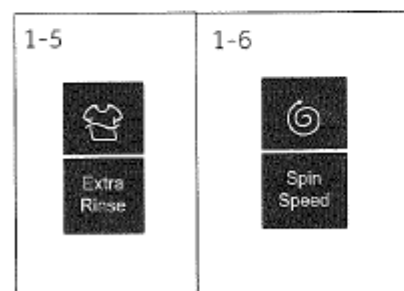

1.4.3 Function button "Extra rinse"

Touch this button (Fig. 1-5) to rinse the laundry more intense with fresh water. This is recommended for people with sensitive skin.

By touching the button several times one to three additional cycles can be selected. They appear in the display with P--0/P--1 /P--2/P--3.

1.4.4 Function "Spin Speed"

Touch this button (Fig. 1-6) to change or deselect the Spin Speed of the programme. If 0 is chosen, then the laundry will not spin.

Note: Liquid detergent

If using liquid detergent, it is not recommended to activate the end time delay.

 
1.4.5 Function "Wash Temp"

Touch this button (Fig. 1-7) to change the washing temperature of the programme.

1.4.6 Function "Dry On/Off"

Knob is in the "Dry+Wash" area. Perform default settings; Touch "Dry On/Off" button (Fig. 1-8), dry function will be switched off and only perform wash function.

In conjunction with the "Delay" button, the child lock function can be switched on/off (see child lock).

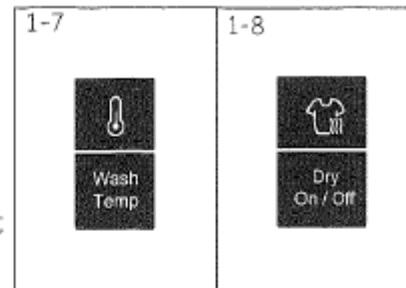


1.4.7 Function "Delay"

Touch this button (Fig. 1-9) to start the programme with a delay. End time delay could be increased in steps of 30 minutes from 0.5-24h. For example display off 5:30 means the cycle will finish in 6 hours and 30 minutes. Touch "Start/Pause" button to activate the time delay.

The time delay must be longer than the programme run time. Otherwise the programme will start immediately.

For deactivating the time delay; rotate programme selector.

 In conjunction with the "Dry On/Off" button, the child lock function can be switched on/off (see child lock).

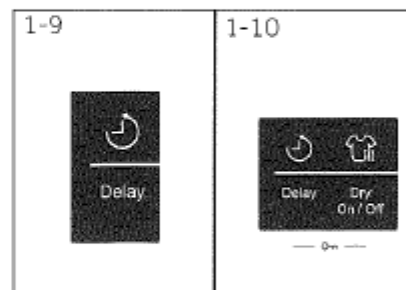


1.4.8 Function "child lock"

This option blocks all panel elements against activation. After programme start press button "Delay" and "Dry On/Off" (Fig. 1-10) for 3 seconds simultaneously; "cLok" is displayed. For unlocking press again the two buttons.

1.5 Display

 If the appliance is on display will light up the actual status on different sections. The information include washing time, spin speed, temperature, etc will appear (Fig. 1-11).



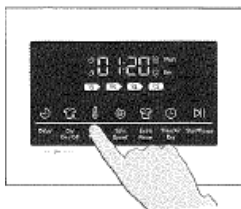

Add individual selections

Select required options and settings refer to "Control panel".

 
Start wash programme

Touch "Start/Pause" button to start. Appliance operates according to selected settings. Changes are only possible by cancelling wash programme.

General information and tips:



1. For safety reasons the door is locked during the running cycle. It is only possible to open the door at the end of the programme or after the programme was cancelled correctly (see description below).
2. In case of high water level, high water temperature and drum spinning, the door will be locked and 'cLok' will be displayed.

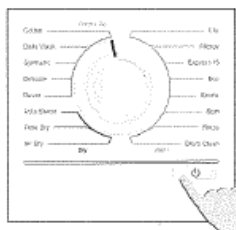

Interrupt cancel wash programme

 
To interrupt a running programme touch gently "Start /Pause" button. Touch it again to resume operation.

To cancel a running programme and all its individual settings, touch "Start/Pause" and then hold the power button for about 3 seconds.

General information and tips:



Choose programme settings carefully referring to icons on each laundry label and "Care chart". Removing laundry promptly at the end of cycle will minimise wrinkling.

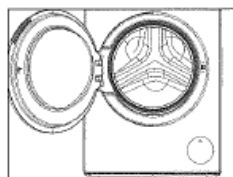

After washing

Turn off the water supply and unplug the power cord. Open the door to prevent formation of moisture and odours. Leave it open while not used.

Important notes

- Please only use the laundry liquids provided by the hotel during the washing cycle. This ensures optimal performance and prevents any undesired outcomes. Washing liquid is available at reception 24/07.
- Please Do Not exert force to open the door. Variations in temperature and water utilisation might occasionally lead to a slight delay in door release.
- Please do not hesitate to seek our help if you require further assistance.